


Z4826

2015-2018 John Deere Gator 825i Cab Heater

Features: High Output Blower, 313 CFM Fan Draws 4.5 Amps, Motor has 4,000 hour Brush Life and 3 year warranty, 2 Fully Adjustable Louvers, Powder coated Steel Case (Not Plastic)

MOUNTING THE HEATER

The heater can be installed over the center dog house with the inlet/outlet facing towards the front of the machine. Cut the heater hose in half and attach them to the two core fittings before mounting the heater.

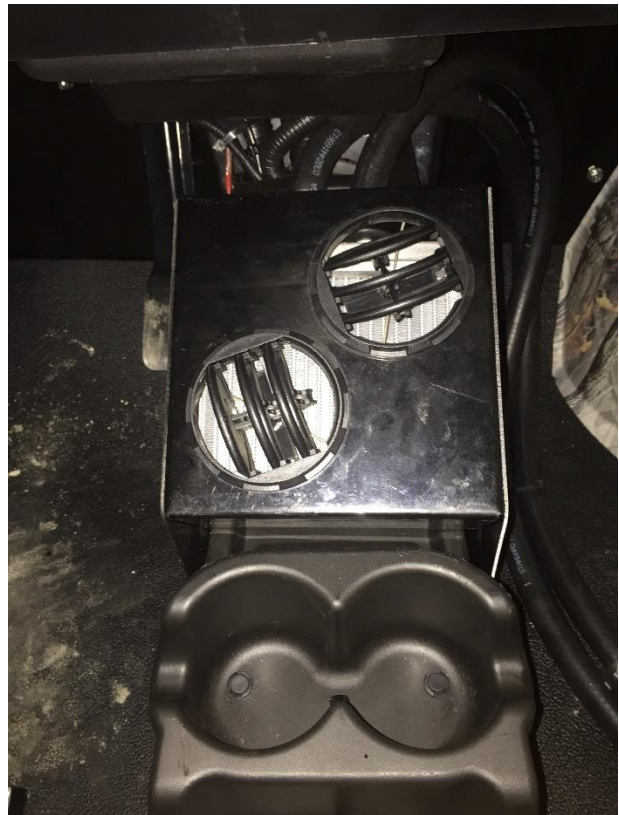


INSTALL THE HEATER HOSE INTO THE RADIATOR LINES

After the hoses are connected take and route them along the passenger's side floor. There are 2 plugs at the back of the passenger side cab (under the seat) and that is where the hoses exit the cab. Now run the hoses up and over the engine to the Driver side. There is a short hose that runs from each cylinder, you are going to eliminate that hose and attach the heater hose from the heater to where that hose was.



WIRING

This is a self-grounded heater, meaning that once it is bolted in, that's what grounds it. There is only one wire needed to hook up to give the fan power. There is an unused wiring harness under the hood, as seen in the picture below, that we plugged the spade into. You do not have to use this, but you need to wire it into a "keyed" power source, so that there is no power when the key is off.

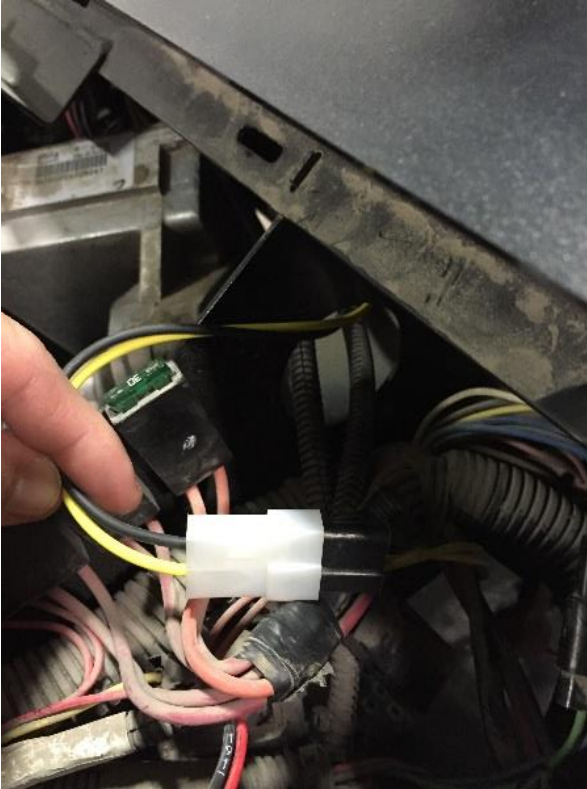

REFILL COOLANT

Now you can refill the radiator and check for leaks. Start the machine and recheck coolant level, the kit will require approximately 1 additional quart of coolant. Allow the engine to warm up and circulate the coolant, it may take a few minutes before you get any heat out of the heater, and this is due to the air in the cooling system. Once you start getting good heat recheck coolant level and check again for leaks. You may need to do this multiple times before all the air is worked out of the system.

Please call 1-866-730-7169 if you have any question.